




Product Installation Instructions

Window Insulation Kit

Covers up to five 36" x 60" windows

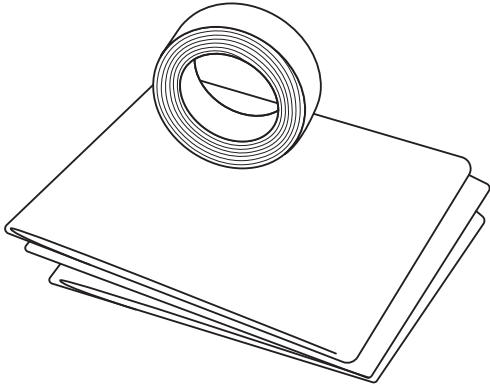

To complete installation, you will need:

- Clear, plastic sheet; 62" x 210" (included in your kit)
- Double-sided tape; 90' (included in your kit)
- Tape measure
- Scissors
- Hair dryer

Instructions

TO INSTALL

1. Apply double-sided tape around edge of window.
2. Remove liner from tape.
3. Measure taped area and cut film to size leaving a 2" overlap on all sides.
4. Press film in place on tape at top of window, then sides and bottom.
5. Shrink film with hair dryer to remove wrinkles (keeping the dryer 1/4" away from film's surface).

TO REMOVE

1. Remove film from tape.
2. Roll off tape slowly with fingertips (warm tape with hair dryer for easier removal).

